

MODIFICATION INSTRUCTIONS

for the

***Kodak X-Omat 2000* PROCESSOR**

Service Code: 3554

Modification No. 3

Type 1 Required

Purpose: To install an EMI FILTER COVER for safety and GROMMETS to prevent a short circuit.



Important

Qualified service personnel must install this modification.

Service Effects:	None
Special Requirements:	None
Serial Numbers:	0 - 201, 269
Installation Time:	1/2 hour
Special Tools:	None
Parts Status:	Parts are available from Service Parts Management.
Parts Requirements:	See Page 2.



PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.



This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

MODIFICATION KIT 7E6226 includes:


Part No.	Description	Quantity
3H9061	EMI FILTER COVER	1
852611	WASHER	2
853100	LOCK WASHER	2
853080	NUT	2
530527	GROMMET	1
7E6343	MODIFICATION INSTRUCTIONS	1

Installing the New Parts




Warning
Dangerous Voltage

[1] De-energize the PROCESSOR.

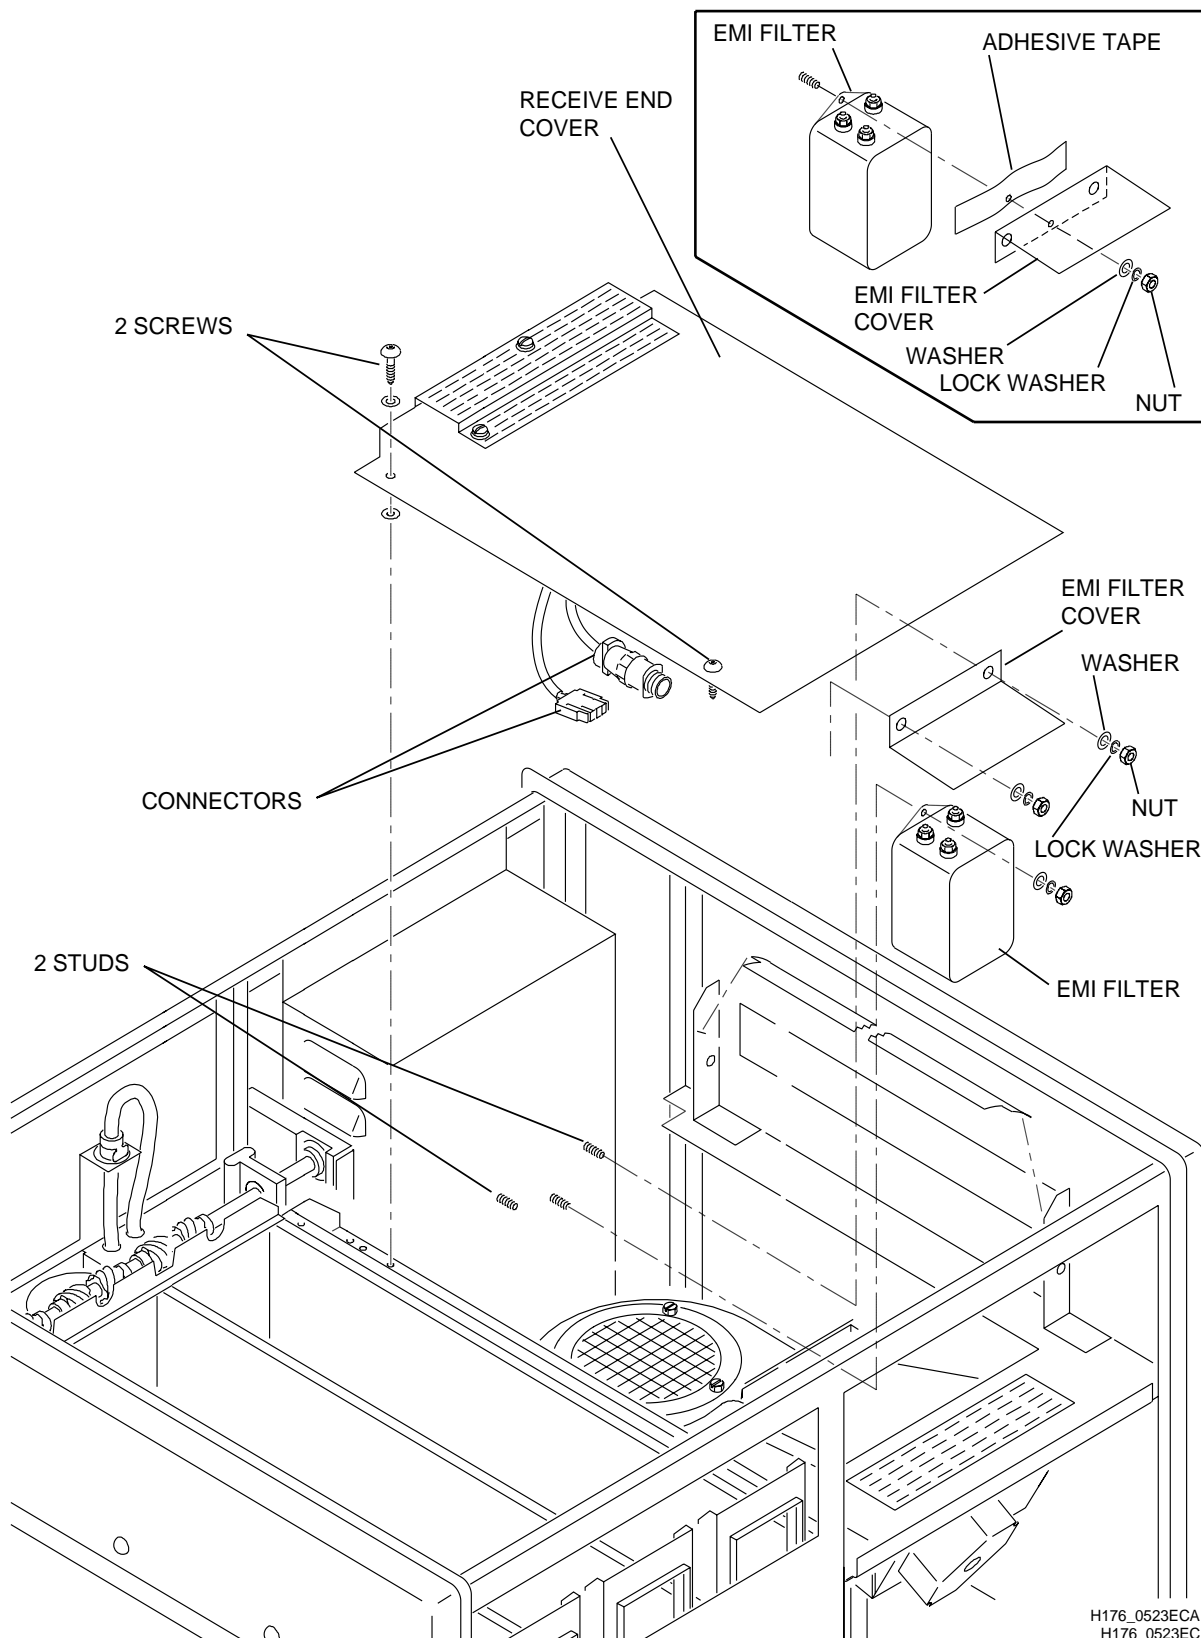

- [2] Remove the DRYER RACK.
- [3] Remove the RECEIVE END COVER.
 - (a) Remove the 2 SCREWS.
 - (b) Disconnect the 2 CONNECTORS.
- [4] Locate EMI FILTER:

If there are 2 STUDS above the EMI FILTER	If there are no STUDS above the EMI FILTER
Install the new EMI FILTER COVER onto 2 STUDS using the 2 new WASHERS, 2 new LOCK WASHERS, and 2 new NUTS.	Install the EMI FILTER COVER onto the MOUNTING STUD for the EMI FILTER. <ul style="list-style-type: none">a. Obtain adhesive tape from the customer. Apply it to the EMI FILTER COVER.b. Make a 4.8mm (0.19 in.) hole in the EMI FILTER COVER.c. Remove the existing WASHER, LOCK WASHER, and NUT.d. Rotate and install the new EMI FILTER COVER.

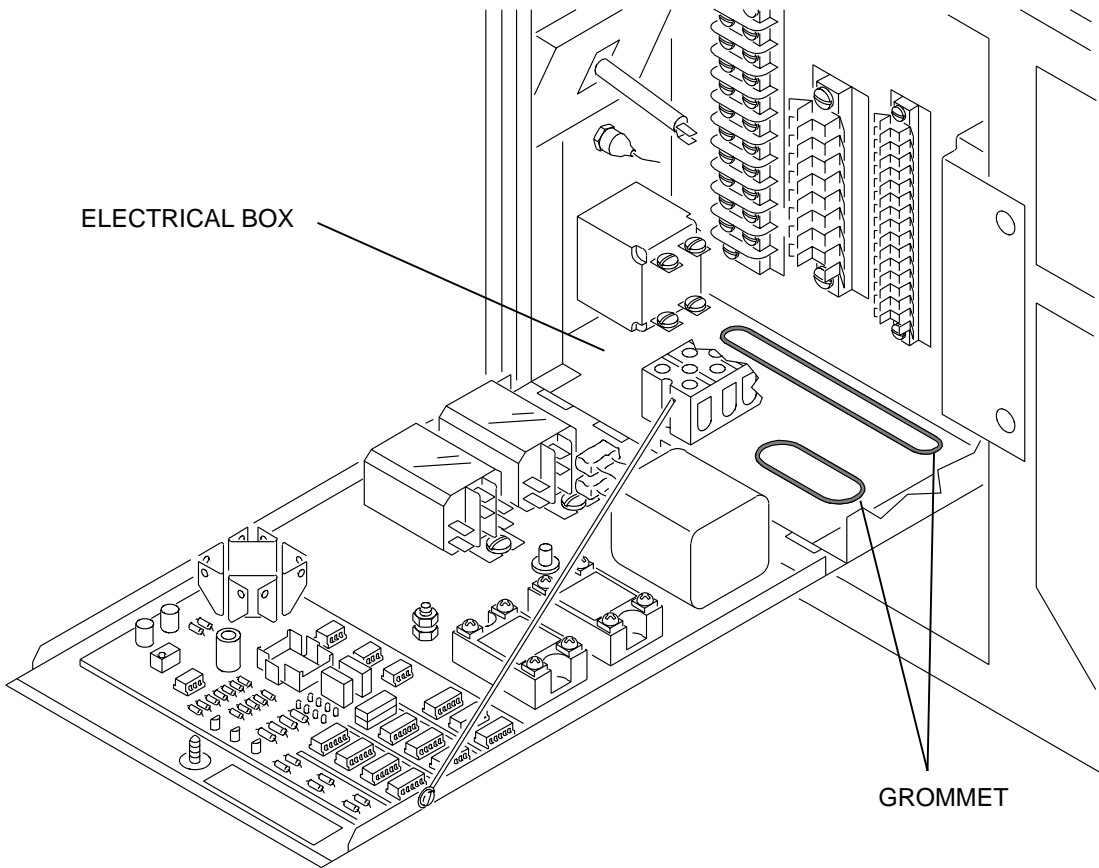

H172_1067HCA
H172_1067HC

- [5] Locate the 2 holes in the bottom of the ELECTRICAL BOX.
- [6] Cut the new GROMMET to the correct size for each hole.
- [7] Install the new GROMMET.

Completing the Modification

- [1] Circle “3” on the MODIFICATION LABEL.
- [2] Assemble the PROCESSOR.
- [3] Energize the PROCESSOR.
- [4] Check that the PROCESSOR is operating correctly.

Publication History

Print Date	Pub. No.	ECO No.	Affected Pages	File Name	Notes
22JAN01	7E6343	4014-540	All	ma3554_3_22jan01.fm	New Publication

Kodak and X-Omat are trademarks.